

Battery Removal and Replacement

Required:

2 x type AA LR6 1.5v Batteries

1. Remove battery cover.
2. Remove and replace batteries (type AA LR6 1.5v) by hand. Ensure correct direction of fitting; as indicated on the circuit board.
3. Replace battery cover.

