


10 Erg USB Racing Setup

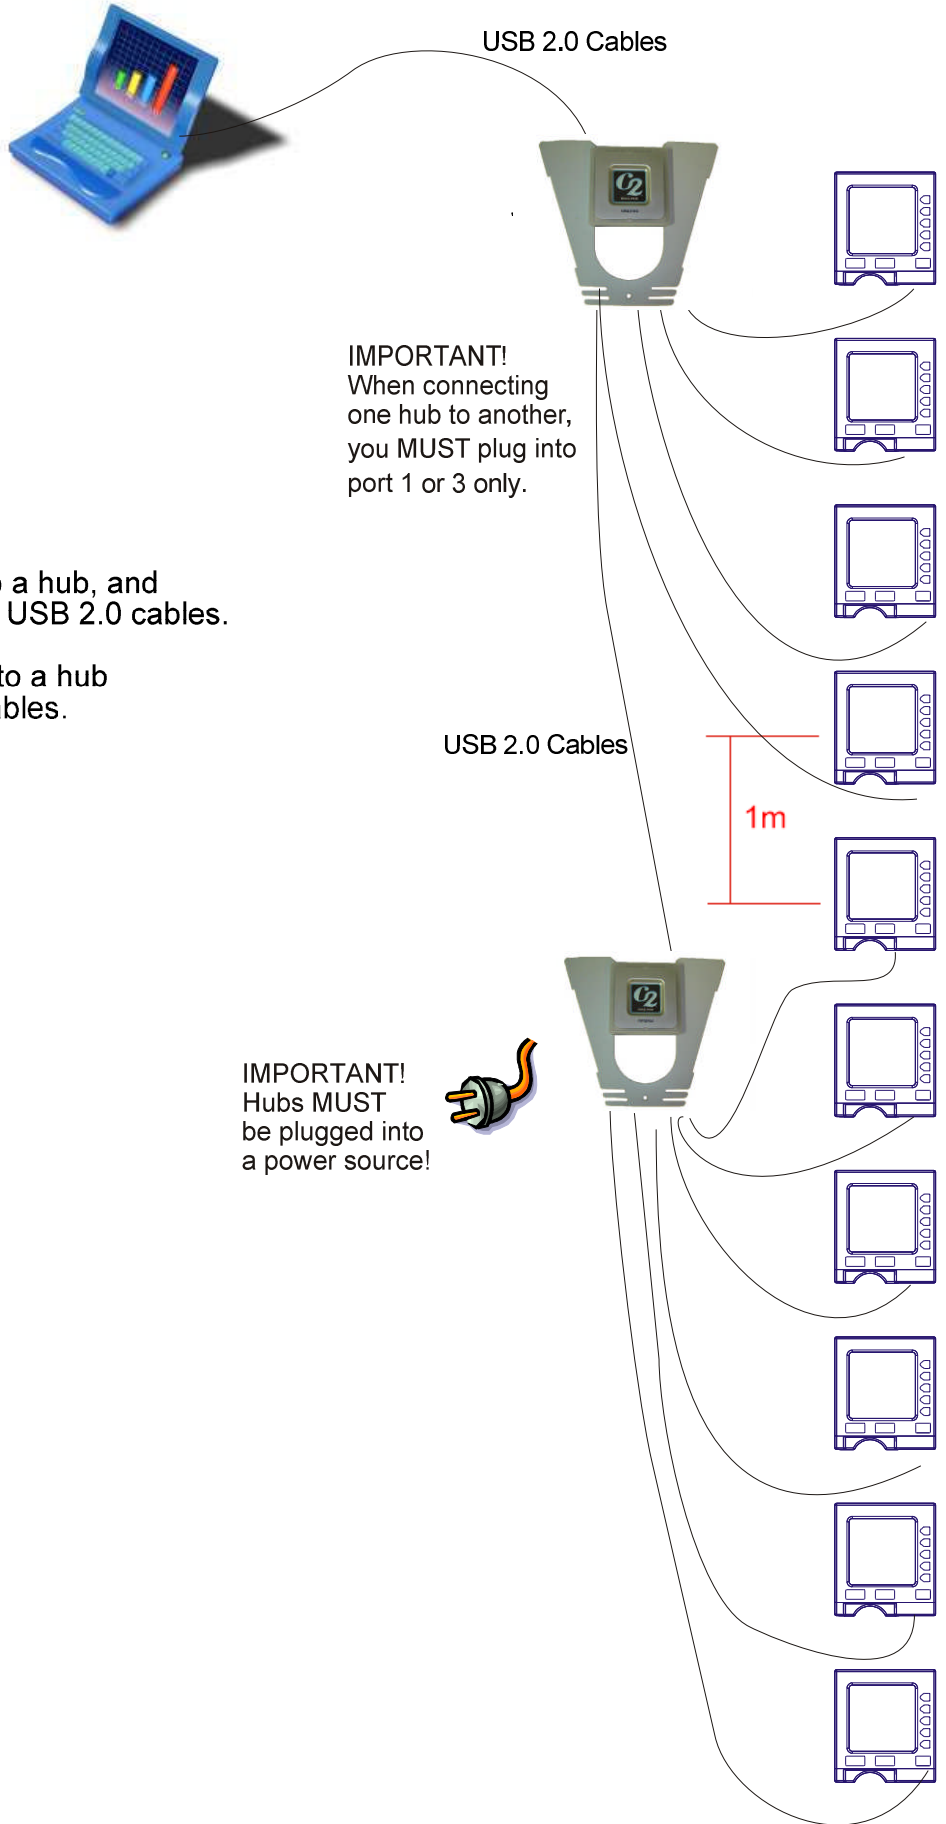

The USB cable connecting the PC to a hub, and connecting hubs together, should be USB 2.0 cables.

The USB cables connecting the PM to a hub can be either USB 2.0 or USB 1.1 cables.

IMPORTANT!
When connecting one hub to another, you MUST plug into port 1 or 3 only.

IMPORTANT!
Hubs MUST be plugged into a power source!